



6.1.3 18~22 HP (UXB 2 Comp)

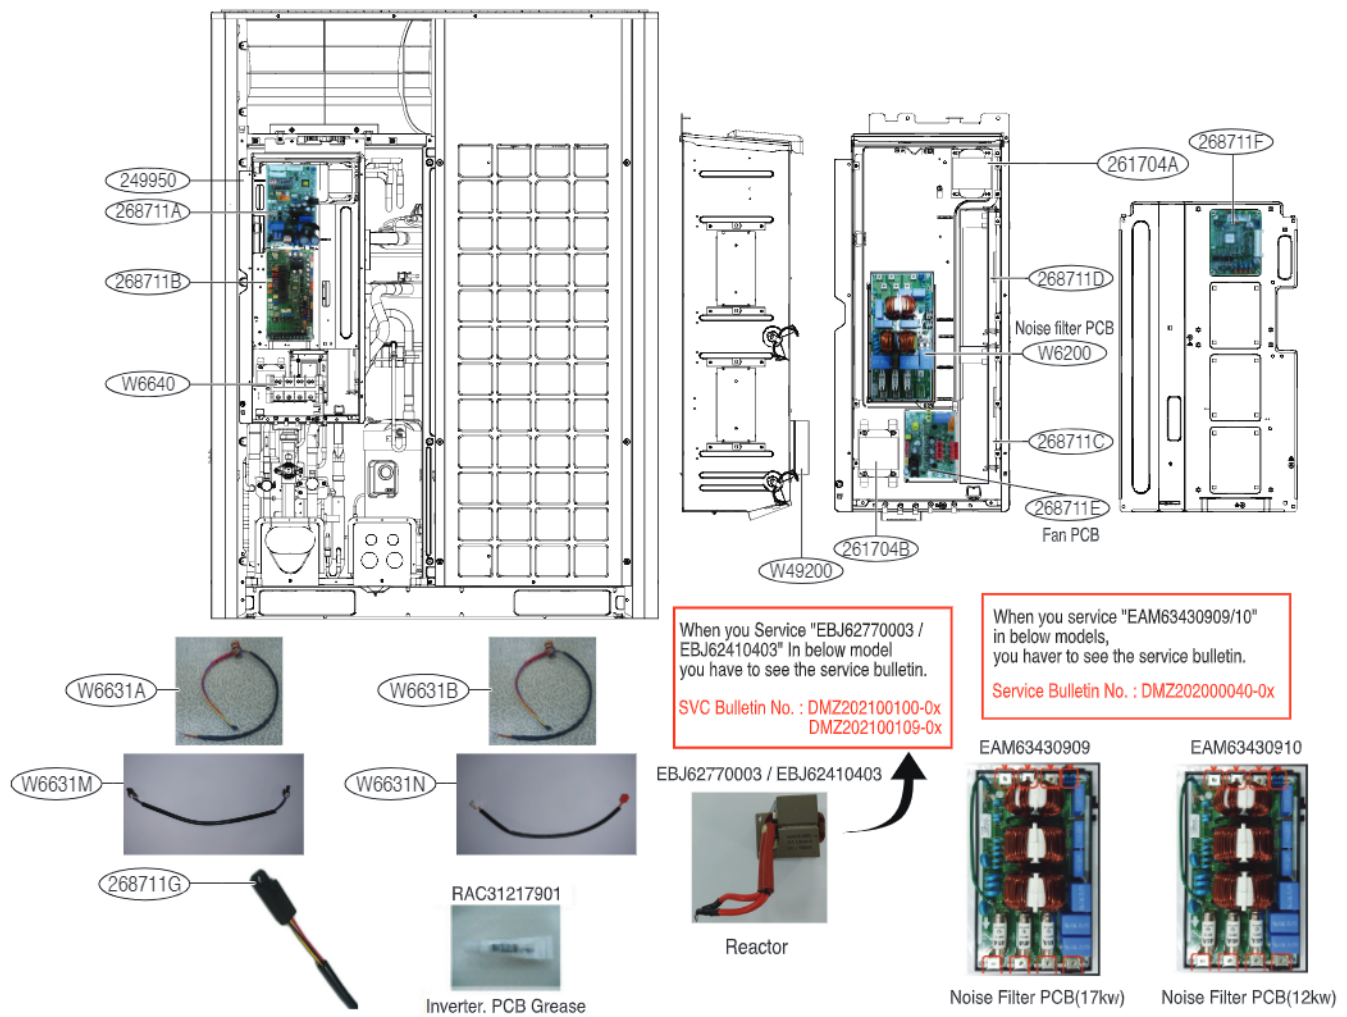


Part	SVC Location NO.	Description
Control Box	249950	Case Assembly, Control Box
Main PCB	268711A	PCB Assembly,Cycle(Onboarding)
External PCB	268711B	PCB Assembly,Main
Inverter PCB	268711C	PCB Assembly,Inv(Onboarding)
Inverter PCB	268711D	PCB Assembly,Inv(Onboarding)
Fan PCB	268711E	PCB Assembly,Fan(Onboarding)
Option PCB	268711F	PCB Assembly,Sub
Noise Filter PCB	W6200	Filter,AC Line

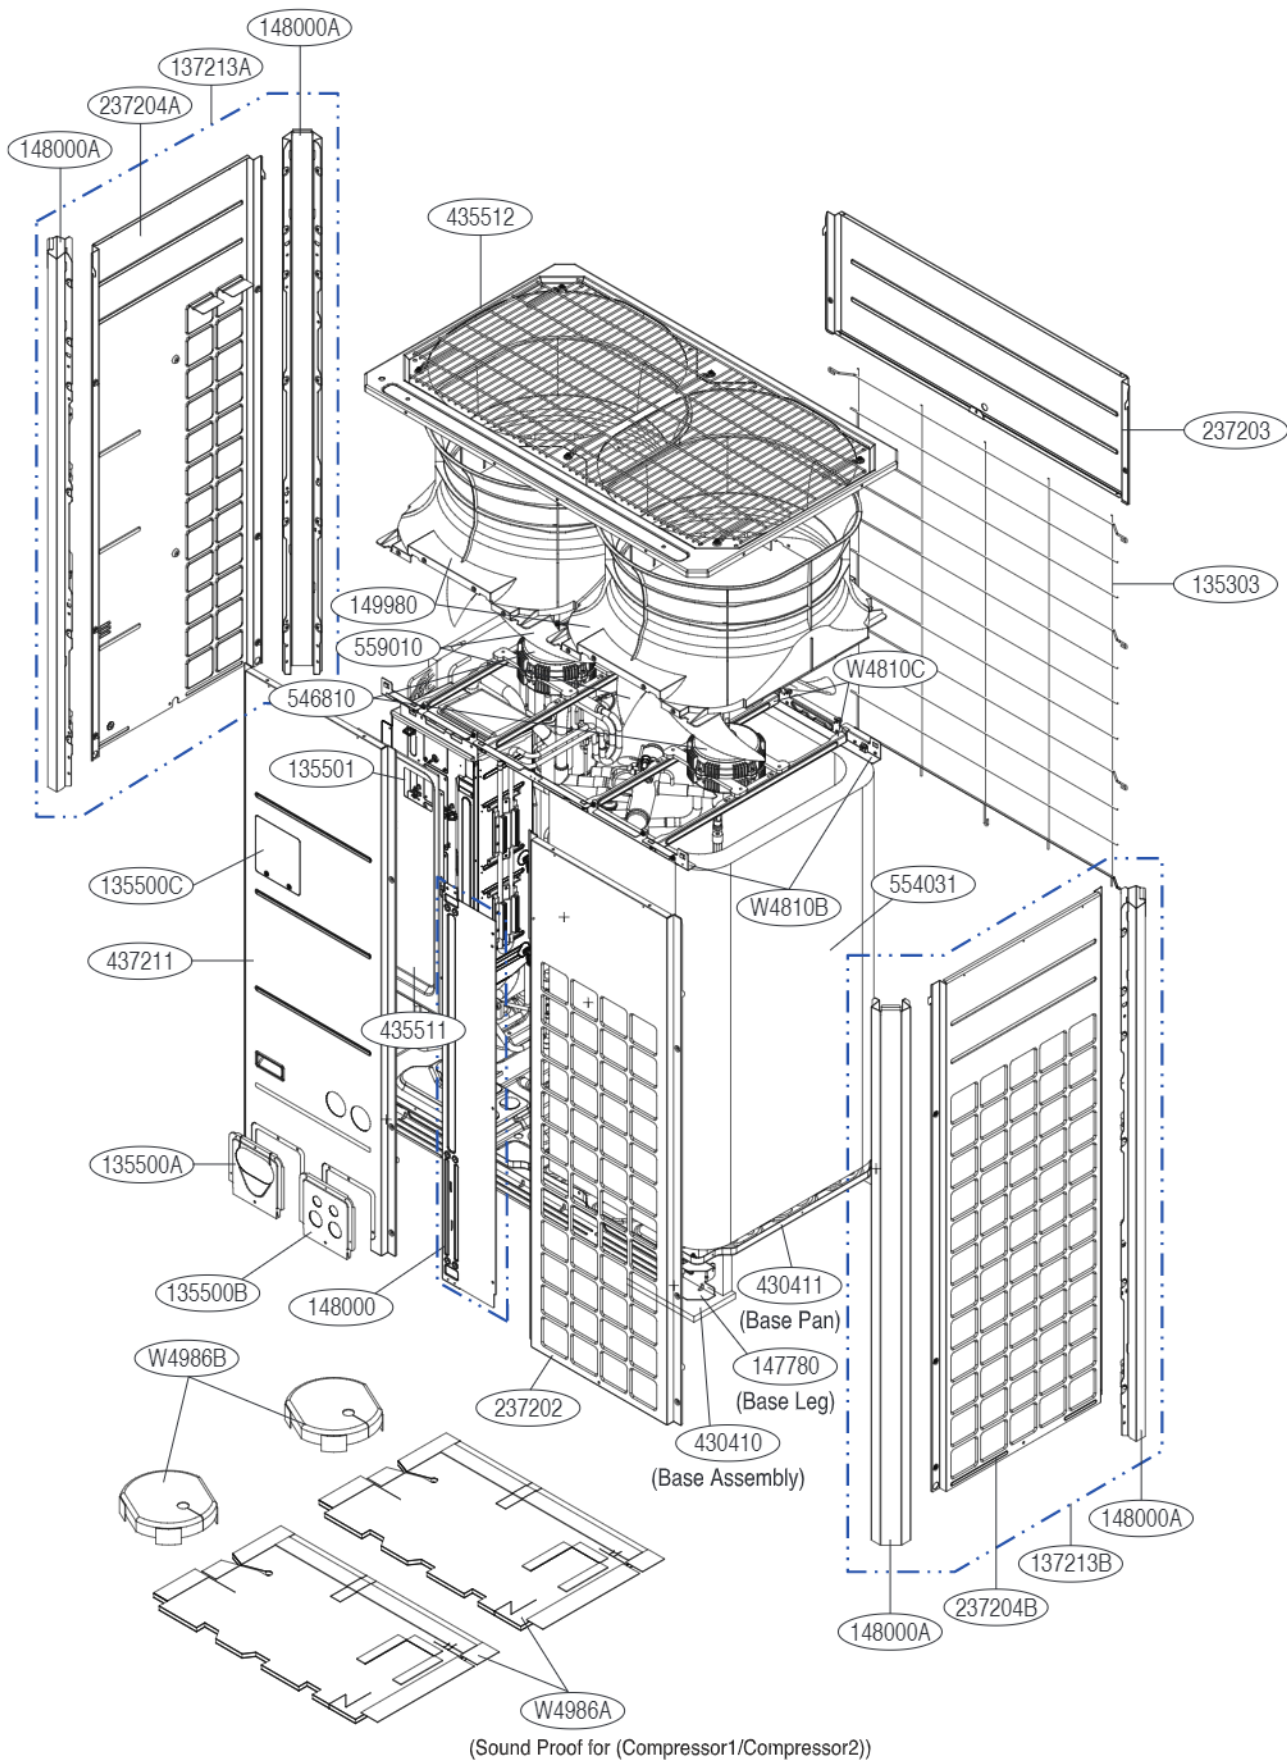


18~22 HP (UXB 2 Comp)

※ If the serial number is 008, please check visual and P/No. first, then choose the correct P/No.
Service Bulletin No : DMZ202000093-01, DMZ202000092-01

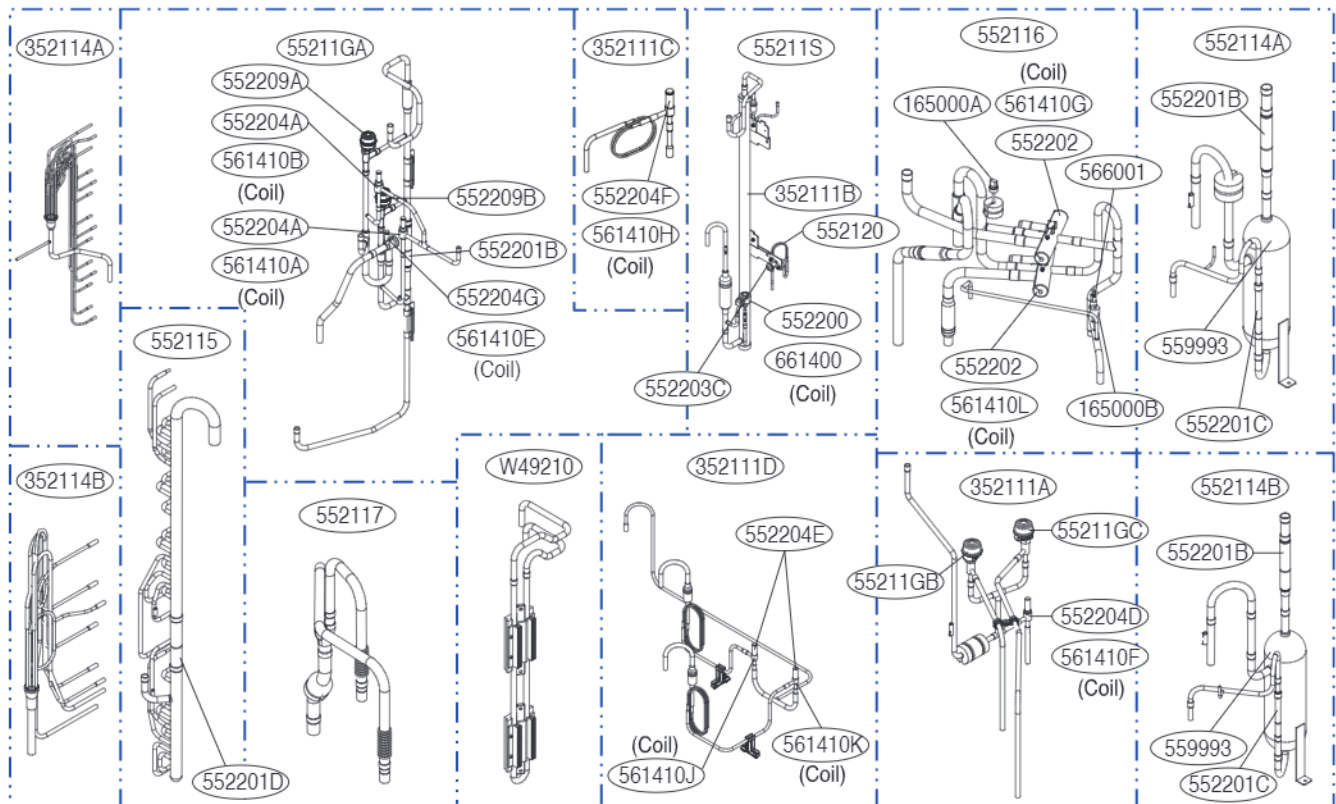

When you service "553000A, 553000B" in below models, you have to see the service bulletin.
Service Bulletin No. : DMZ202000043-0x~DMZ202000048-0x

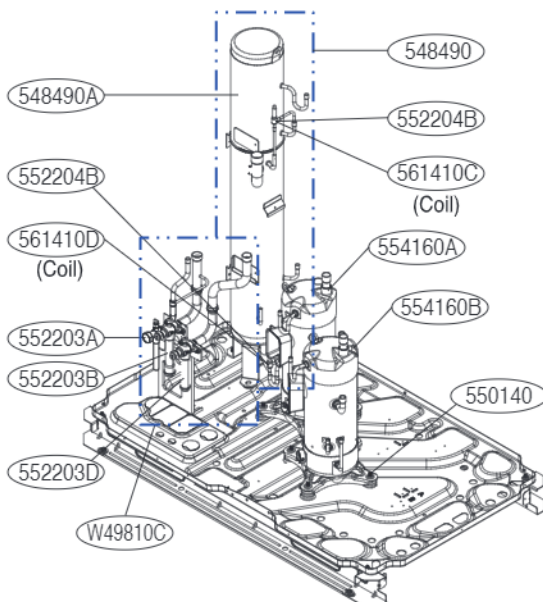

(Compressor1 Oil Level Sensor)



(Compressor1 Sump Heater)



(Compressor2 Oil Level Sensor)



(Compressor2 Sump Heater)

Part	L/No	Sensor location	Housing color
Temp. Sensor 1	263230A	Air	Green
Temp. Sensor 2	263230B	Suction Pipe + HEX1(Temp. Sensor) + Inverter1 Discharge	Purple
Temp. Sensor 3	263230C	Sub Cool Out + HEX2(Upper Temp. Sensor) + Liquid Pipe	Yellow
Temp. Sensor 4	263230D	HEX3(Low Temp. Sensor) + Inverter2 Discharge + Sub Cool In	Black